



238 Pillow Street
Butler, PA 16001
724-283-4681
724-283-5939 (fax)
www.bwieagle.com

PRODUCT INFORMATION BULLETIN

AIR-EAGLE® XLT RF Transmitter MODEL 44-2000-BIN-INPUT

DESCRIPTION

The AIR-EAGLE XLT is one of a series of RF systems designed for long-range wireless remote control in a variety of industrial applications. Each system, consisting of a receiver and transmitter can be configured to remotely control pumps, lights, conveyors, gates and other electrical apparatus. Integral high current relays can be directly interfaced with the customer's equipment or P.L.C. Capable of receiving remote signals transmitted from several miles away, the Air-Eagle XLT utilizes spread-spectrum technology and provides the utmost security and reliability even in the noisiest RF environments. The model 44-2000-BIN-INPUT has been programmed to accept 8-BIT binary data to be transmitted to multiple receivers.

INSTALLATION

DISCONNECT AC Power from all equipment before installation.

1. Mount the AIR-EAGLE XLT UNIT in a convenient location.
2. Install antenna. The unit has an antenna connector located on the right side on the enclosure. Attach the supplied whip antenna to this connector.
3. Connect AC power and control to the proper terminals in your control circuit.


TERMINAL STRIP WIRING

1	Binary Input 7 (+)	10	Binary Input 4 (+)	19	Binary Input 1 (+)
2	Binary Input Common	11	Binary Input Common	20	Binary Input Common
3	Not Used	12	Not Used	21	Not Used
4	Binary Input 6 (+)	13	Binary Input 3 (+)	22	Binary Input 0 (+)
5	Binary Input Common	14	Binary Input Common	23	Binary Input Common
6	Not Used	15	Not Used	24	Not Used
7	Binary Input 5 (+)	16	Binary Input 2 (+)		
8	Binary Input Common	17	Binary Input Common		
9	Not Used	18	Not Used		

AC INPUT	
Terminal #1	120 VAC - (Hot)
Terminal #2	120 VAC - (Neutral)



DIMENSIONS

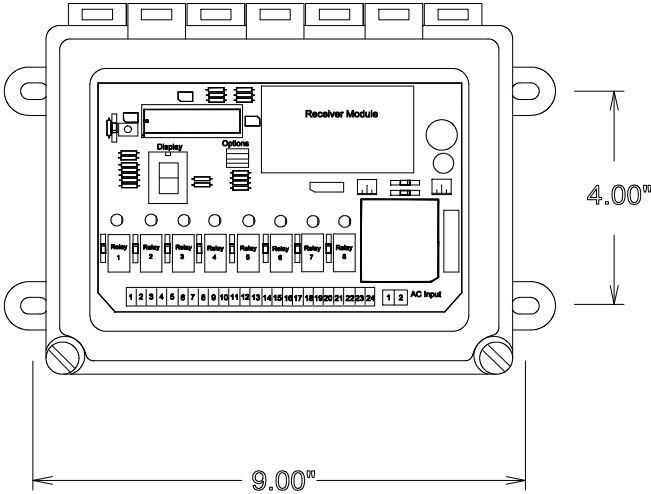

Enclosure height equals 4.375 inches.

APPROVALS

United States (FCC)	OUR-9XSTREAM
Canada (IC)	4214A-9XSTREAM

AIR-EAGLE® XLT

RF Transmitter

MODEL 44-2000-BIN-INPUT



CONTROLS AND INDICATORS

CONTROL / INDICATOR	FUNCTION			
TRANSMITTER MODULE	RF module that transmits data to the remote receivers			
DISPLAY	7-Segment LED display			
SEL 1 (SW 1-3):	Network Address	SW1	SW2	SW3
<i>USED TO SET NETWORK FREQUENCY</i>	1	OPEN	OPEN	OPEN
	2	CLOSED	OPEN	OPEN
	3	OPEN	CLOSED	OPEN
	4	CLOSED	CLOSED	OPEN
	5	OPEN	OPEN	CLOSED
SEL1 (SW 4):	SW #	OPEN	CLOSED	
<i>USED TO SET CONFIGURATION OPTIONS</i>	SW4	Not Used	Not Used	

GENERAL OPERATION

Inputs #1 thru #8 are based on specific binary numbers being received from a PLC. The LED display will show a "0" when no data is being sent and will show an "8" when binary data is being transmitted.

NUMERIC DISPLAY	SEL1-#4 OPEN (NORMAL OPERATION)
"0"	Power on / No data being sent
"8"	8-BIT binary data being transmitted

SPECIFICATIONS

AC Input	120 VAC, 16 W, 50/60 Hz
Fuse Protected	1 amp
Receiver Range	Approximately 2500 feet (Up to 4 miles with external antenna - see accessories)
Receiver Frequency	900 MHz Spread Spectrum
RF Channels	Five independent network frequencies
Enclosure	Hinged fiberglass with window / NEMA 3, 3R, 4, 12, 13
Operating Temp	-40° F to +185° F

REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	44-2002-BIN-INPUT
Air-Eagle XLT Receiver – Dual Relay	44-1050-BIN-1&2
Air-Eagle XLT Receiver – Dual Relay	44-1050-BIN-3&4
Standard Antenna (Included):	
900MHz Portable Antenna (For distances up to 2500 feet*)	49-1103
Optional Antennas and Accessories:	
900MHz Omni Directional Antenna (For distances of 2500 feet to 2 miles*)	49-3101
900MHz 13dB Yagi Antenna Long Range Operation (For distances of 2 miles to 4 miles*)	49-3102
Flex Coax Cable w/Connectors	49-4000-XX (XX = # of Feet)
Inline Lightening Arrestor	49-5002
* = Line of Sight	

LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle XLT Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of 1 year after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 20-Oct-04



238 Pillow Street
Butler, PA 16001
(724) 283-4681
Fax (724) 283-5939
www.bwieagle.com