



238 Pillow Street  
Butler, PA 16001  
724-283-4681  
724-283-5939 (fax)  
www.bwieagle.com


# PRODUCT INFORMATION BULLETIN

## AIR-EAGLE® XLT 900MHz RF Transceiver DUAL CONTACT INPUT / OUTPUT MODEL 44-4000N4W-120VAC

### DESCRIPTION


The AIR-EAGLE XLT RF TRANSCEIVER is a dual I/O unit designed to transmit and receive unique signals from an identical unit located up to 2500 feet (\*) away. This model comes equipped with dual contact inputs and dual relay outputs. This allows the user to not only transmit information out, but receive a confirming signal back that the operation was performed. Enclosed in a rugged NEMA 4 enclosure, this unit is well-suited to meet the environmental challenges of any industry. A terminal strip has been provided for interfacing with external dry contact inputs as well as dry contact relay outputs. This unit can operate remote machinery such as pumps, gates, chutes etc. (\*) Up to four miles with external antennas – see accessories

### DIMENSIONS & INDICATORS

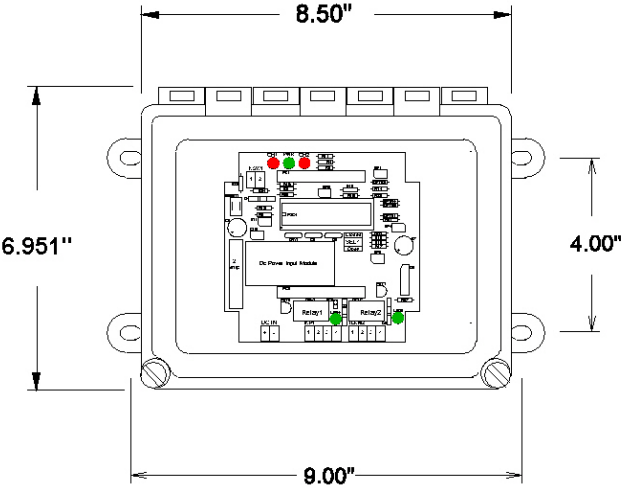

- CH1 LED** - Red LED illuminates continuously when the contact input for Channel 1 is closed.
- POWER LED** – Green LED illuminates continuously while power is applied to the transceiver.
- CH2 LED** - Red LED illuminates continuously when the contact input for Channel 2 is closed.
- RELAY 1 LED** - Green LED illuminates continuously while Relay #1 is energized.
- RELAY 2 LED** – Green LED illuminates continuously while Relay #2 is energized.

### PC BOARD SET-UP INFORMATION

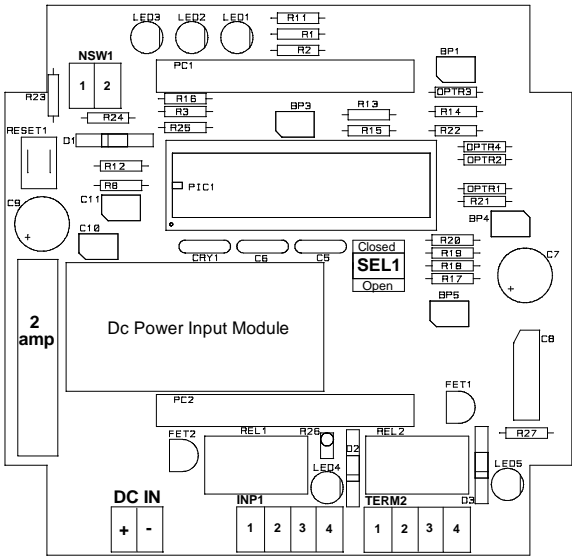

Make the following connections on the PC Board Terminal Strip:

DC INPUT TERMINAL STRIP (DC IN)	
Term1	Positive (+) 12VDC INPUT from internal 120VAC adapter
Term2	Negative (-) 12VDC INPUT from internal 120VAC adapter

INPUT 1 TERMINAL STRIP (INP1)	
Terminal 1	CH1 Dry Contact Input (+)
Terminal 2	CH1 Dry Contact Input (Common)
Terminal 3	CH2 Dry Contact Input (Common)
Terminal 4	CH2 Dry Contact Input (+)

I/O TERMINAL STRIP (TERM2)	
Terminal 1	Relay 1 Common
Terminal 2	Relay 1 N/O
Terminal 3	Relay 2 Common
Terminal 4	Relay 2 N/O

NETWORK SWITCH CONFIGURATION OPTIONS (SEL1)			
SEL 1 (SW1 & 2):	Network Address	SW1	SW2
USED TO SET NETWORK FREQUENCY	#1	OPEN	OPEN
	#2	CLOSED	OPEN
	#3	OPEN	CLOSED
	#4	CLOSED	CLOSED

# AIR-EAGLE® XLT

900MHz RF Transceiver  
DUAL CONTACT INPUT / OUTPUT

**MODEL 44-4000N4W-120VAC**

## APPROVALS

United States (FCC)	OUR-9XSTREAM
Canada (IC)	4214A-9XSTREAM

## SPECIFICATIONS

Power Supply	120VAC from internal adapter
Fuse Protected	2 amp
Frequency	900MHz Spread Spectrum
RF Channels	Four independent network frequencies
RF Output Power	100mW
Transceiver Range	Approximately 2500 feet (Up to 4 miles with external antenna - see accessories)
Transmitter Data	Two DRY Contact Inputs
Relay Contacts	SPST N/O 5 amps @ 120VAC
Enclosure	Hinged fiberglass with window / NEMA 3, 3R, 4, 12, 13
Operating Temp	-40° F - +185° F

## REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	44-4002
Standard Antenna (Included):	
900MHz Portable Antenna (For distances up to 2500 feet*)	49-1103
Optional Antennas and Accessories:	
900MHz Omni Directional Antenna (For distances of 2500 feet to 2 miles*)	49-3101
900MHz 13dB Yagi Antenna Long Range Operation (For distances of 2 miles to 4 miles*)	49-3102
Flex Coax Cable w/Connectors	49-4000-XX (XX = # of Feet)
Inline Lightning Arrestor	49-5002
* = Line of Sight	

## LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of **1 year** after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 24-Oct-03



238 Pillow Street  
Butler, PA 16001  
(724) 283-4681  
Fax (724) 283-5939  
[www.bwieagle.com](http://www.bwieagle.com)