



238 Pillow Street  
Butler, PA 16001  
724-283-4681  
724-283-5939 (fax)  
www.bwieagle.com

# PRODUCT INFORMATION BULLETIN

## AIR-EAGLE® FM2 900MHz RF Receiver THREE RELAY OUTPUT MODEL 43-4730-DC

### DESCRIPTION

The AIR-EAGLE FM2 RF RECEIVER IS a three relay output unit designed to receive unique signals from a handheld transmitter, located up to 1200 feet away. This model has one toggle/latching relay, and two momentary relay outputs. A terminal strip has been provided for interfacing with external dry contact relay outputs. This unit can operate remote machinery such as pumps, gates, chutes etc.

### PC BOARD SET-UP INFORMATION


Make the following connections on the PC Board Terminal Strip:

DC INPUT TERMINAL STRIP (DC IN)	
Terminal 1	Positive (+) 9-36 VDC INPUT
Terminal 2	Negative (-) 9-36 VDC INPUT

OUTPUT TERMINAL STRIP (INP1)	
Terminal 1	Relay 3 Common
Terminal 2	Relay 3 N/O
Terminal 3	Not Used On This Model
Terminal 4	Not Used On This Model

OUTPUT TERMINAL STRIP (TERM2)	
Terminal 1	Relay 1 Common
Terminal 2	Relay 1 N/O
Terminal 3	Relay 2 Common
Terminal 4	Relay 2 N/O

NETWORK SWITCH CONFIGURATION OPTIONS (SEL1)			
SEL 1 (SW1 & 2):	Network Address	SW1	SW2
<i>USED TO SET NETWORK FREQUENCY</i>	#1	OPEN	OPEN
	#2	CLOSED	OPEN
	#3	OPEN	CLOSED
	#4	CLOSED	CLOSED

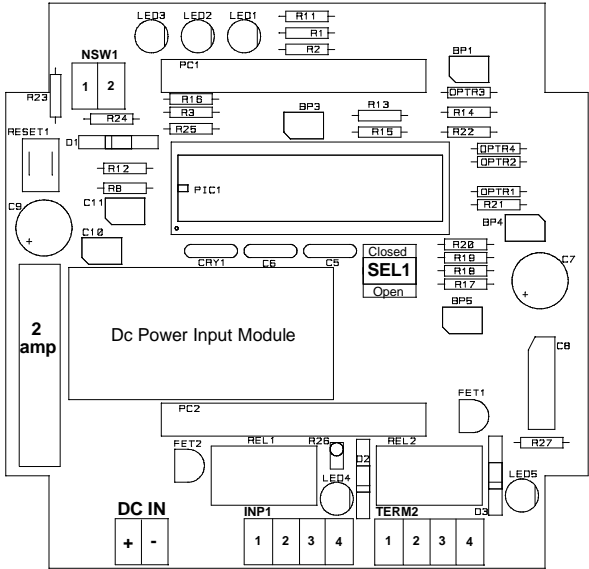


# AIR-EAGLE® FM2

## 900MHz RF Receiver

### THREE RELAY OUTPUT

## MODEL 43-4730-DC

### DIMENSIONS & INDICATORS

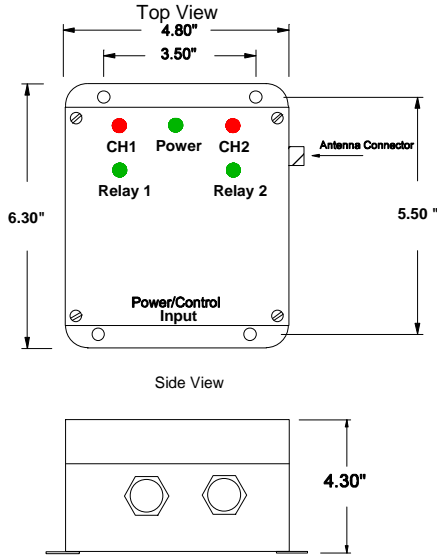

**CH1 LED (RELAY 1)** - Red LED illuminates continuously while Relay #1 is energized.

**POWER LED** – Green LED illuminates continuously while power is applied to the transceiver.

**CH2 LED (RELAY 2)** - Red LED illuminates continuously while Relay #2 is energized.

**RELAY 1 (RELAY 3) LED** – Red LED illuminates continuously while Relay #3 is energized.

**RELAY 2 LED** – Not Used On This Model

### SPECIFICATIONS

Power Supply	9 – 36 VDC @ 10 Watts
Fuse Protected	2 amp
Relay Contacts	SPST N/O 5 amps @ up to 36VDC
Receiver Range	Up to 1200 feet with external antenna – (see accessories)
Receiver Frequency	900MHz Spread Spectrum
RF Channels	Four independent network frequencies
Enclosure	ABS Plastic, NEMA 3, 3R, 4, 4X, 12, 13
Operating Temp	-40° F - +185° F

### REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	43-4732
Standard Antenna (Included):	
900MHz TNC Portable Antenna (For distances up to 600 feet*)	49-1103
Optional Antenna & Accessories:	
900MHz Omni Directional Base Antenna (For distances up to 1200 feet*)	49-3101
Flex Coax Cable w/Connectors	49-4000-XX (XX = # of Feet)
Inline Lightning Arrestor	49-5002
* = Line of Sight	

### LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of **1 year** after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 20-Dec-04



238 Pillow Street  
Butler, PA 16001  
(724) 283-4681  
Fax (724) 283-5939  
[www.bwieagle.com](http://www.bwieagle.com)