



238 Pillow Street
Butler, PA 16001
724-283-4681
724-283-5939 (fax)
www.bwieagle.com

PRODUCT INFORMATION BULLETIN

AIR-EAGLE® XLT 900 MHz RF Transmitter DUAL CONTACT INPUT MODEL 44-1000RSB-XX-12VDC XX = UNIT NUMBER (1 THRU 24)

DESCRIPTION

The model has been designed specifically to transmit vibration information to a remote receiver. An integral reset button has been added to the top of the enclosure to reset the remote receiver from an alarm condition.

PC BOARD SET-UP INFORMATION

Make the following connections on the PC Board Terminal Strip:



DC INPUT TERMINAL STRIP (DC IN)	
Terminal 1	Positive (+) 12VDC INPUT
Terminal 2	Negative (-) 12VDC INPUT

INPUT 1 TERMINAL STRIP (INP1)	
Terminal 1	CH1 Dry Contact Input (+)
Terminal 2	CH1 Dry Contact Input (Common)
Terminal 3	Reset Button Input (+)
Terminal 4	Reset Button Input (-)

I/O TERMINAL STRIP (TERM2)	
Terminal 1	Not Used On This Model
Terminal 2	Not Used On This Model
Terminal 3	Not Used On This Model
Terminal 4	Not Used On This Model

NETWORK SWITCH TERMINAL STRIP (NSW1)	
Terminal 1	Not Used On This Model
Terminal 2	Not Used On This Model

NETWORK SWITCH CONFIGURATION OPTIONS (SEL1)			
SEL 1 (SW1 & 2):	Network Address	SW1	SW2
USED TO SET NETWORK FREQUENCY	#1	OPEN	OPEN
	#2	CLOSED	OPEN
	#3	OPEN	CLOSED
	#4	CLOSED	CLOSED

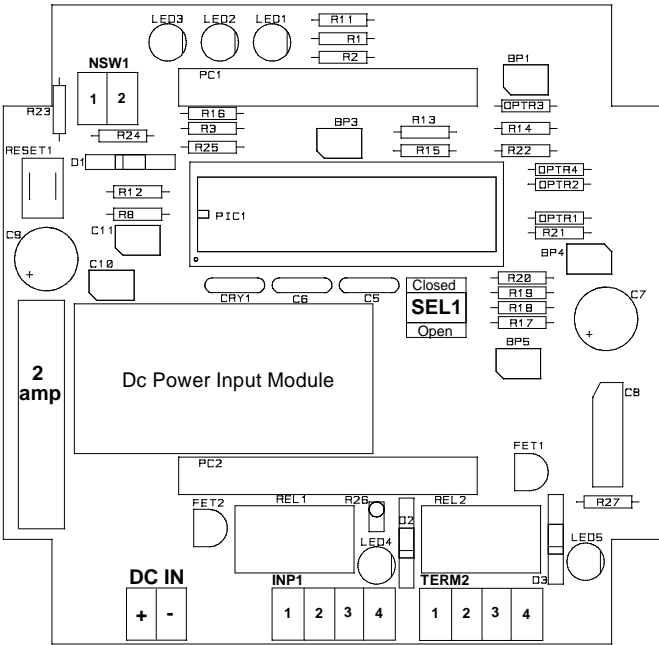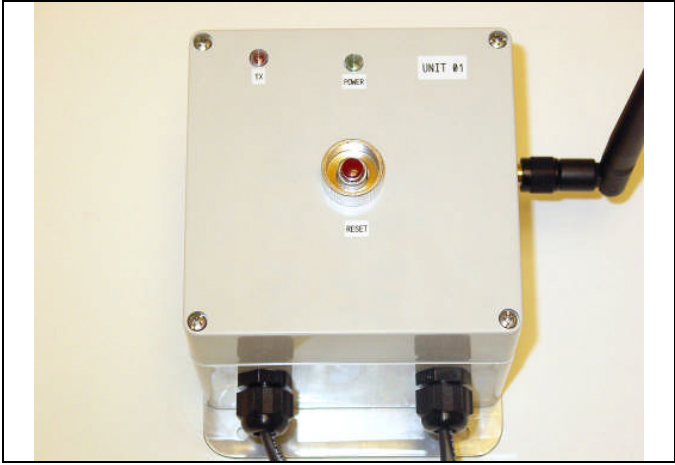


AIR-EAGLE® XLT

900 MHz RF Transmitter
DUAL CONTACT INPUT

MODEL 44-1000RSB-XX-12VDC
XX = UNIT NUMBER (1 THRU 24)

DIMENSIONS & INDICATORS

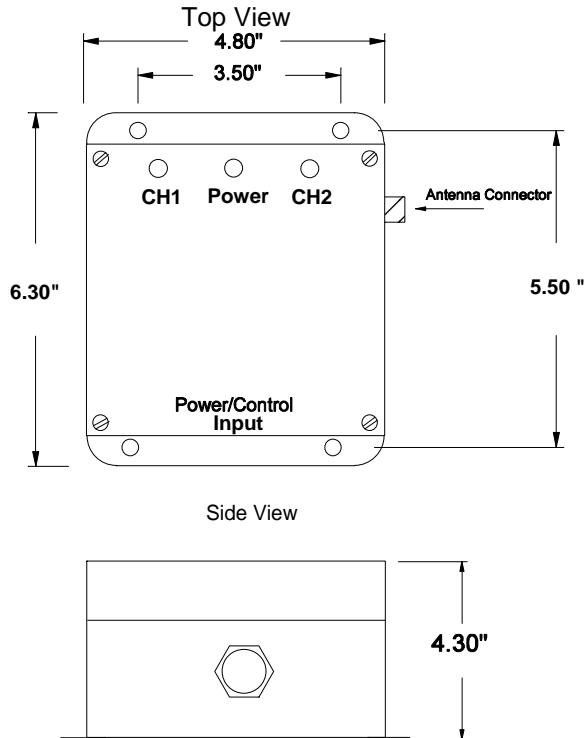

CH1 LED – Red LED illuminates continuously when the contact input for Channel 1 has been activated. This LED will continue to be illuminated until the operator has depressed the reset button. At this time, the CH1 LED will go out, and a signal is sent to the remote receiver to de-energize the corresponding control relay.

POWER LED – Green LED illuminates continuously while power is applied to the transmitter.

CH2 LED – Not used on this model.

SPECIFICATIONS

Power Supply	9 – 18 VDC Input
Fuse Protected	2 amp
Transmit Frequency	900MHz Spread Spectrum
RF Output Power	140mW
Transmit Range	Up to 4 miles with external antenna - see accessories)
Enclosure	Fiberglass NEMA 12 + 13

REPLACEMENT PARTS & ACCESSORIES

PC Board (Main)	44-1002RSB-XX-12VDC
Air-Eagle XLT Receiver	44-2700-C8, C16 OR C24
Replacement /Optional Antennas:	
900MHz Portable Antenna	49-1103
900MHz Omni Directional Base Antenna	49-3101

LIMITED WARRANTY STATEMENT

BWI Eagle Inc. warrants the Air-Eagle Remote Control System, if properly used and installed, will be free from defects in material and workmanship for a period of **1 year** after date of purchase. Said warranty to include the repair or replacement of defective equipment. This warranty does not cover damage due to external causes, including accident, problems with electrical power, usage not in accordance with product instructions, misuse, neglect, alteration, repair, improper installation, or improper testing. This limited warranty, and any implied warranties that may exist under state law, apply only to the original purchaser of the equipment, and last only for as long as such purchaser continues to own the equipment. This warranty replaces all other warranties, express or implied including, but not limited to, the implied warranties or merchantability and fitness for a particular purpose. BWI Eagle makes no express warranties beyond those stated here. BWI disclaims without limitation, implied warranties of merchantability and fitness for a particular purpose. Some jurisdictions do not allow the exclusion of implied warranties so this limitation may not apply to you. To obtain warranty service, contact BWI Eagle for a return material authorization. When returning equipment to BWI Eagle, the customer assumes the risk of damage or loss during shipping and is responsible for the shipping costs incurred.

DOCUMENT DATE: 11-Oct-05



238 Pillow Street
Butler, PA 16001
(724) 283-4681
Fax (724) 283-5939
www.bwieagle.com